SIMPLY CLEVER

ŠkodaRoomster
QUICK REFERENCE GUIDE

You have opted for a Škoda – our sincere thanks for your confidence in us.

This brief instruction serves as a quick reference with individual control elements. However this brief instruction does not replace the Owner's Manual of your Fabia.

Equipment which is marked * is only standard on certain vehicle model versions or only suppliable as optional equipment for certain models.

We wish you pleasant motoring at all times.

ŠkodaAuto

INSPECT ENGINE OIL LEVEL



ⓐ Do not top up with oil
ⓑ Oil can be replenished
ⓒ Oil must be replenished

⚠ WARNING!!

Avoid dripping oil onto hot parts of the engine when topping up will oil – a risk of fire!

Caution!

The oil level must on no account extend beyond the range ⓐ. Danger of damaging the catalytic converter.

UNLOCKING AND LOCKING

Unlocking or locking the vehicle causes all the doors and the fuel filler flap* to be unlocked or locked at the same time by the central locking system. The boot lid is unlocked when opening.

Locking and unlocking using the key

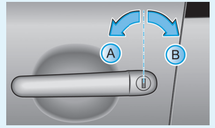

In order to unlock the vehicle, turn the key in the lock of the driver's door to the left into the opening position Ⓐ.

In order to lock the vehicle, turn the key in the lock of the driver door to the right into the closing position Ⓑ.

Remote control*

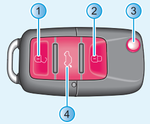

Press button for about 1 second.

① Unlocking the vehicle
② Unlocking the vehicle
③ Folding out/up of the key
④ Boot lid remote release

SEATS

Adjusting the front seats

① Adjusting a seat in a forward/back direction

② Adjusting height of seat*

③ Adjusting angle of backrest

Folding the rear seats forwards



Moving seats in forward/back direction



Folding seat fully forwards

Adjust the angle of the seat backrest

Secure folded forward seats

Before folding the rear seats forward adjust the front seats in such a way that they are not damaged when folding forward the rear seats.

SAFETY

Correct seated position for the driver

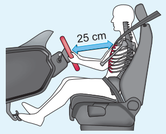

⚠ WARNING!

Adjust the steering wheel so that the distance between the steering wheel and your chest is at least 25 cm. If you do not maintain this minimum distance, the airbag system will not be able to fulfill its protective function – when activating it can pose danger to life!

Adjusting the hight of the belt

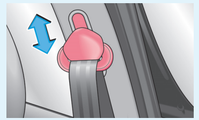

To adjust the belt height press the height adjuster and move it up or down.

Then pull firmly on the belt to ensure that the seat belt height adjuster has correctly locked in place.

⚠ WARNING!

Adjust the height of the belt in such a way that the shoulder part of the belt is positioned approximately across the middle of your shoulder – on no account across your neck!

INSTRUMENTS

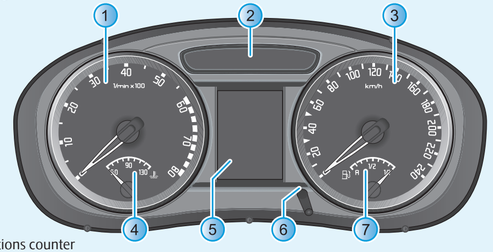

① Engine revolutions counter

② Display:
- with digital clock
- with counter for distance driven

③ Speedometer

④ Coolant temperature gauge*

⑤ Display:
- with Service Interval Display
- with multi-functional indicator*
- with information display*

⑥ Clock-set button / reset button

⑦ Fuel gauge*

Set hours
Turn the reset button ⑥ to the left.

Setting minutes
Turn the reset button ⑥ to the right.

REFUELLING

Opening the fuel filler cap

Open the fuel filler flap with the hand. Unlock the fuel filler cap on the fuel filler tube by turning the vehicle key to the left. Unscrew the fuel filler cap anti-clockwise and place the fuel filler cap from above on the fuel filler flap.

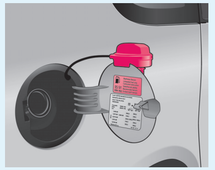

WARNING LIGHTS

	Turn signal light		- Lack of oil
	Main beam		Brake pad wear*
	Low beam		Open door*
	Rear fog light		Fluid level in windshield washer system*
	Dynamo		Control system for exhaust
	Fog lights*		Traction Control System (TCS)*
	Cornering lights*		Tyre pressure*
	Electrohydraulic power steering		Selector lever lock*
EPC	EPC fault light (petrol engine)		Electronic stability programme (ESP)*
	Glow plug system (diesel engine)		Antilock brake system (ABS)*
	Turn signal light for vehicle with trailer*		Brake system
	Coolant temperature/coolant level		Airbag system
	Electronic immobiliser		Diesel particle filter* (diesel engine)
	Fuel reserve		Seat belt warning light*
	Engine oil pressure		

Škoda Auto pursues a policy of constant product and model development. We trust that you will understand that changes to models in terms of shape, equipment and engineering, may be introduced at any time. It is therefore not possible for legal claims to be made based on the data, illustrations and descriptions contained in this Owner's Manual.

Reprinting, reproduction or translation, either in whole or in part, is not permitted without the written consent of Škoda Auto.

Škoda Auto expressly reserves all rights relating to copyright laws.

We reserve the right to make changes to this document.

Issued by: ŠKODA AUTO a.s.

© ŠKODA AUTO a.s. 2008

Zkrácený návod S80.5611.02.20

Roomster anglicky 02.08 5J7 012 040 AQ

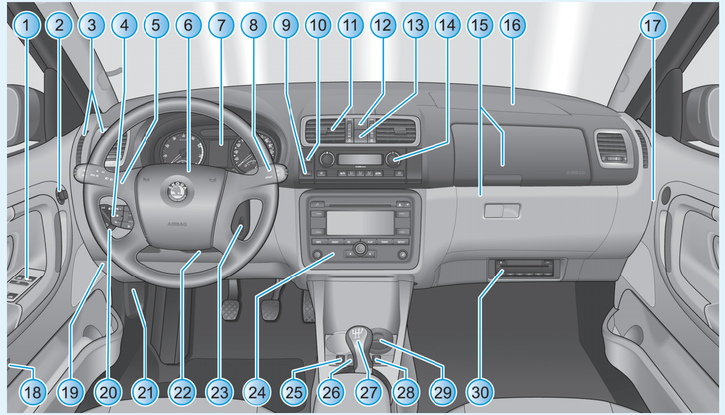

1. Power windows*
2. Electric exterior mirror adjustment*
3. Air outlet vents
4. Multi-functional module*
5. Lever for the multi-functional switch
6. Headlight flasher, driver airbag
7. Instrument cluster: Instruments and Indicator/Warning Lights
8. Lever for the multi-functional switch
9. Switch for rear window heater
10. ESP* button, TSC* button
11. Air outlet vents
12. Button for hazard warning lights system
13. Indicator light for a switched off front seat passenger airbag*
14. Operating controls for the heating and air conditioning*
15. Storage compartments on the front passenger side*
16. Front passenger airbag*
17. Switch for the front seat passenger airbag(s)*
18. Boot lid remote release*, Interior monitoring*
19. Fuse box in the dash panel
20. Light switch, control dial for beam range adjustment
21. Bonnet release lever
22. Lever for steering wheel adjustment
23. Ignition lock
24. Radio*
25. Rocker switch for heating on the driver's seat*
26. Buttons for central locking*
27. Selector lever*
28. Rocker switch for heating on the front passenger seat*
29. Ashtray*, Storage compartment
30. CD changer*

1 Power windows*

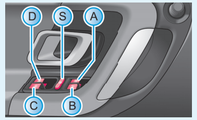

- A Power window of the driver's door
- B Power window of the front passenger door
- C Right rear power window*
- D Left rear power window*
- S Safety switch*

2 ELECTRIC EXTERIOR MIRROR ADJUSTMENT*



- Heating of the external mirror
- L Heating of the external mirror
- O Adjustment switched off
- R Right exterior mirror adjustment

20 IGNITION LOCK

- Parking lights
- Low beam and main beam
- 0 Light off
- Fog lights
- Rear fog light

5 MULTI-FUNCTIONAL SWITCH

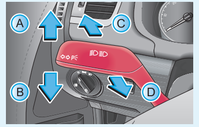

- A Turn signal light right
- B Turn signal light left
- C Switching on and off the main beam
- D Headlight flasher

8 MULTI-FUNCTIONAL SWITCH

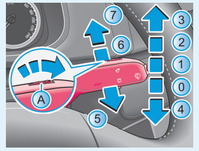

Windshield wiper and wash system

- A Intermittent switch
- 0 Windscreen wipers turned off
- 1 Intermittent wipe
- 2 Slow wipe
- 3 Fast wipe
- 4 Brief use of wiper
- 5 Automatic wash/wipe

Rear window wiper*

- 6 Intermittent wipe every 6 seconds
- 7 Automatic wash/wipe

22 LEVER FOR STEERING WHEEL ADJUSTMENT

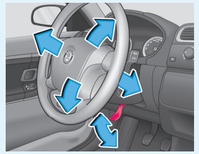

WARNING!

You must not adjust the steering wheel when the vehicle is moving!

27 SELECTOR LEVER*

Automatic gearbox*

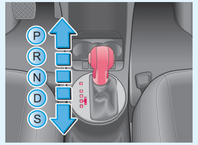

- P Park position
- R Reverse
- N Neutral (Neutral position)
- D Actual position for driving forward
- D Position for sporty style of driving

Manual gearshift (Tiptronic)

+ Shifting up gears
- Shifting down gears

WARNING!

Never move the selector lever into position R or P when driving – risk of accident!

14 OPERATING CONTROLES FOR HEATING AND AIR CONDITIONING*

Climatic*

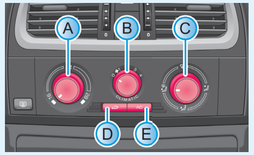

- A Setting temperature
- B Controlling blower
- C Control for air distribution
- D Recirculated air mode
- E Switching cooling on and off

Climatronic*

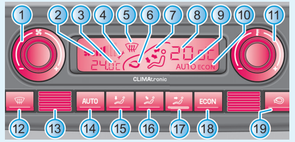

Buttons / control dial

1. Setting the blower speed

Displays

2. Selected blower speed
3. Outside temperature
4. Diagnostic equipment connected
5. Air flow to the windscreen
6. Recirculated air mode
7. Air flow to the upper part of the body, middle part of the body and feet
8. Selected interior temperature
9. Automatic mode
10. ECON mode

Buttons / control dial

11. Setting the interior temperature
12. Air flow to the windscreen
13. Thermistor
14. Automatic mode
15. Air flow in the footwell
16. Air flow to the middle part of the body
17. Air flow to head
18. Button for switching off cooling system
19. Recirculated air mode

21 Bonnet release lever

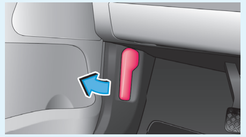

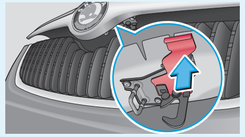

WARNING!

For safety reasons, the bonnet must always be properly closed when driving. Check each time after closing the bonnet, that it is properly closed!